

DW 9300 SNARE DRUM STAND

Remove the stand and all packing materials from the box, then follow these instructions to set up and adjust your stand to fit the way you play.

Section 1: Leg Assembly and Height Adjustments

Section 1.1: Leg Assembly

1. Loosen wingscrew on the clamp at top of base section.
2. Pull legs outward far enough to allow the clamp to contact memory lock.
3. Tighten wingscrew.

To open or close the legs, loosen the drumkey screw on the leg memory lock located on the bottom tube section. Loosen the wingscrew on the clamp at top of base section and adjust the tripod to achieve the desired position. Then tighten the clamp and memory lock screw.

Section 1.2: Height

1. Loosen the memory locks and wingscrews on tube receivers.
2. Raise or lower the upper tubing section to the desired position.
3. Tighten memory locks and wingscrews on tube receivers.

Section 2: Snare Drum Basket Adjustments

Section 2.1: Snare Drum Basket

1. Loosen the TechLock™ drumkey screw and Position Reset handle on large basket tilter.

Note: The Position Reset Handle is spring activated. To operate, grasp the handle with your fingers and use your thumb to press on the button in the center of the handle while pulling the handle away from the tilter. Reset the handle to a more comfortable position and release.

2. Rotate the basket and positioning rod so that the basket is in its upright position and tighten the Position Reset Handle.
3. Open the basket by rotating the large knurled knob at the bottom of the basket clockwise several turns.
4. Place snare drum on basket so that it rests on the rubber grips.
5. Tighten the basket by turning the large knurled knob counterclockwise.

Note: Although a tighter basket will make your drum more secure it may also choke the drum. Experiment to find the best tightness for your situation.

6. Tighten the TechLock™ drumkey screw.


Section 2.2: Drum Positioning

By loosening the Position Reset Handles and TechLock™, the angle, rotation and offset position of the 9300 can easily be adjusted.

- a. Angle/Rotation - The basket can be tilted in any direction to achieve the most desirable position.
- b. Distance Offset - The position of the Positioning Rod can be adjusted to allow for an increased offset between the basket and the stand which makes the 9300 more adaptable to the position of other stands, drums and pedals.

Section 2.3: Basket Removal


For easier pack up and more consistent set up, the 9300 features a removable basket. To remove the basket from the stand, collapse the basket 1/2 way and loosen the two drumkey screws that are located at the point where the basket is attached to the positioning rod. You can now remove the basket from the rod. This allows you to pack up the stand while maintaining your position settings.

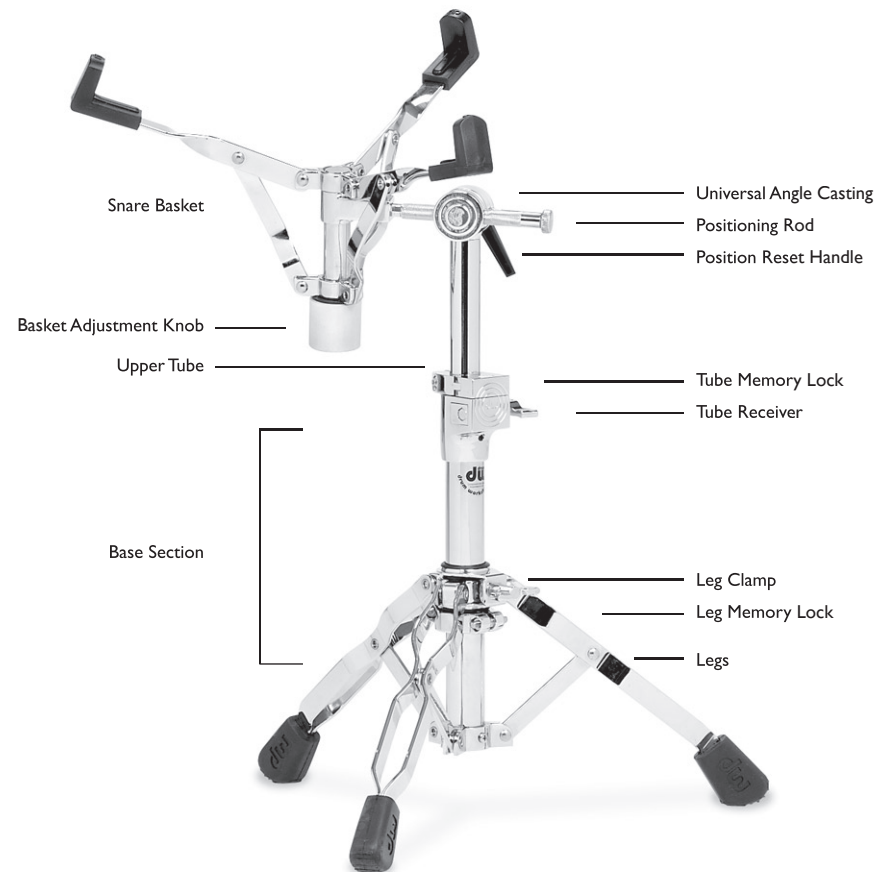

9300



removable basket

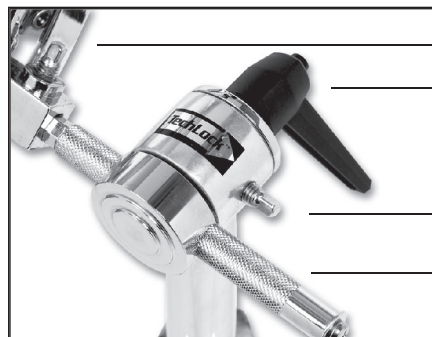

universal position adjustment

Basket Removal Screw

Position Reset Handle

TechLock™

Positioning Rod

Instructions and parts identifications also apply to 9300L and 9303 stands.

DW 9300 Snare Drum Stand

— Don Lombardi
President, Drum Workshop, Inc.

Thanks for purchasing this DW product. It has been designed and manufactured to provide a lifetime of trouble-free service. Please take a moment to familiarize yourself with the exclusive features and operating suggestions contained in this manual in order to ensure its optimum performance. Should you have any further questions, feel free to contact your local authorized DW dealer.

9000 SERIES SNARE DRUM STANDS

O W N E R ' S M A N U A L



The Drummer's Choice®

DRUM WORKSHOP, INC
3450 Lunar Court • Oxnard, CA 93030 USA
www.dwdrums.com

specifications subject to change without notice
PR-OM-93 00 © DW 2004

DW HARDWARE 5-YEAR LIMITED WARRANTY

For a period of five years from the date of purchase, Drum Workshop, Inc. guarantees the original owner, when presented with proof of purchase, that all 9000, 5000 and 6000 Series Hardware cast parts are free of material and manufacturing defects. This warranty is limited to cast parts only. This warranty does not include moving parts. If, under normal playing conditions, parts covered in this limited five year warranty fail, they will be replaced at no charge. Return the item to your authorized DW dealer or, if there is not a dealer in your area, contact DW directly. DO NOT send products to DW without first receiving a Return Authorization Number. Shipping charges to DW will be paid by the consumer. DW's maximum liability pursuant to this warranty is limited to the monetary value of the product that is the subject of the warranty claim. This is a summary only; please see the actual limited warranty for additional terms and conditions.



9300
snare
drum

9934
double
tom/cymbal

9900
double
tom

9710
straight
cymbal

9700
straight/boom
cymbal

9500
hi-hat

9100
round
throne

9120
motorcycle
throne

A wide range of DW 9000 Series Stands, Pedals, Thrones and Accessory Clamps and Arms are now available.

Contact your authorized DW dealer for additional accessories and replacement parts.