

GO:PIANO with Alexa Built-in


Quick Start

GO:PIANO with Alexa Built-in (which we'll subsequently call "the GO:PIANO") lets Amazon Alexa control the piano in response to your voice.

You can play back music, review a past practice, or even check the weather forecast...

Let's download the GO:PIANO Alexa Setup app from the Apple App Store® or from Google Play™, and set up Amazon Alexa.

*“Alexa,
Ask GO:PIANO, Play For Elise.”*

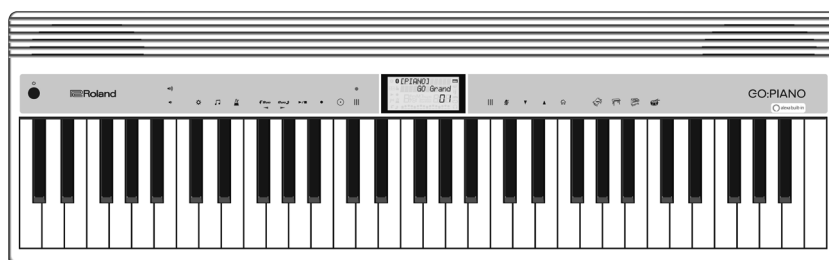


Before using this unit, carefully read "USING THE UNIT SAFELY" and "IMPORTANT NOTES" (the leaflet "USING THE UNIT SAFELY" and the Owner's Manual). After reading, keep the document(s) where it will be available for immediate reference.

© 2019 Roland Corporation



Once the GO:PIANO can connect to your wireless network and you can use the “Amazon Alexa” app (described below), you won’t need to make those settings (the steps 1–3) again. If you’ve already completed these preparations, proceed to “4. Using Voice Commands” (p. 3).

1. Turning the Power On

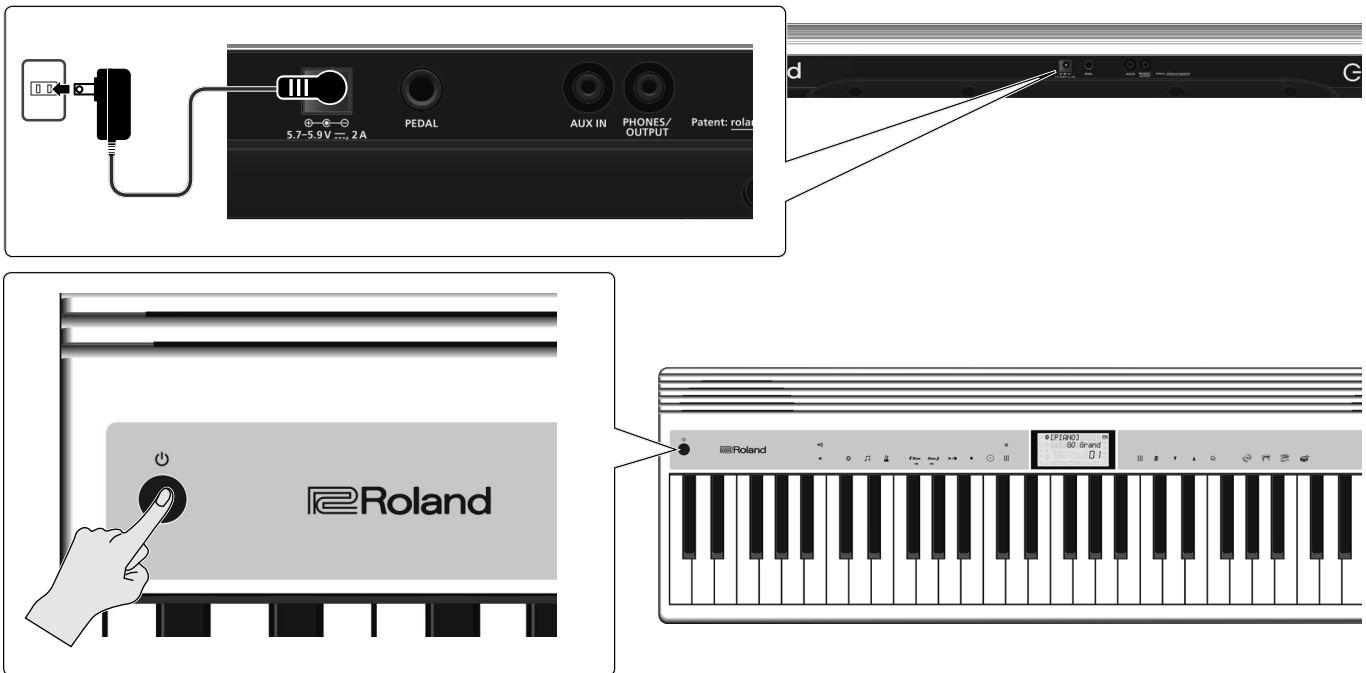

* If this unit is being operated on batteries, it cannot be connected to a wireless network (you cannot use the Amazon Alexa functionality). If you want to connect to a wireless network, connect the AC adaptor to a power supply.

2. Downloading the GO:PIANO Alexa Setup App

In order to set up Amazon Alexa, download the GO:PIANO Alexa Setup app to your smartphone or tablet.



<http://roland.cm/gpalexaapp>

Connecting to the Internet

Using the GO:PIANO Alexa Setup app, connect the GO:PIANO to the internet (wireless network).

Start the GO:PIANO Alexa Setup app, and connect the GO:PIANO to the internet as directed by the app.



3. Downloading the Amazon Alexa App

Using a “Skill” (Specific Voice Commands)

A “skill” is a set of keywords that enhances the GO:PIANO’s functionality by adding specific voice commands. By enabling a skill, you can operate the GO:PIANO using your voice.




1. Start the Amazon Alexa app.
2. Tap [≡](menu) and then tap [Skill].
3. Search for GO:PIANO, and then tap [Enable].

4. Using Voice Commands

After enabling the skill, try talking to the GO:PIANO to operate it.

MEMO

Alexa skill is available only in English and Japanese.

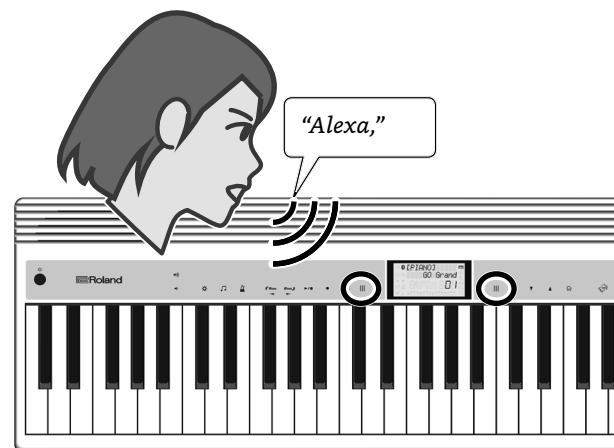

1. Say “Alexa,”
At this time, the GO:PIANO’s indicator is lit blue and light blue alternately.
2. Say “Ask GO:PIANO, play For Elise.”
The built-in song “Für Elise” plays.

If GO:PIANO with Alexa Built-In Won’t Connect to the Internet

Check the following points, and try the suggested actions.

Items to Check	Action
Could the unit be operating on batteries?	If the unit is operating on batteries, it cannot use a wireless network. Connect the AC adaptor, and turn the power off and on again.
Could the Amazon Alexa indicator be lit light blue?	Immediately after this unit is powered-on, it will be in the process of connecting to the network, so Amazon Alexa will not respond. Wait until the Amazon Alexa indicator is unlit.
Is the wireless network strong enough?	
Could there be a microwave oven or other device nearby that might cause electromagnetic interference?	Move your wireless LAN router closer to this unit, or remove the source of electromagnetic interference.
Are you signed in to your Amazon account and your Roland account?	In order to operate the piano with your voice, you must sign into both your Amazon account and your Roland account. Use the Amazon Alexa app to sign into your Amazon account, and use the GO:PIANO Alexa Setup app to sign into your Roland account.

Things to Try

Here are some typical voice commands.

Listen to Music

- "Alexa, play music."*
- "Alexa, stop."*
- "Alexa, turn up the volume."*

Questions & Answers

- "Alexa, why is the sky blue?"*
- "Alexa, what is the piano?"*
- "Alexa, who is Beethoven?"*

Weather

- "Alexa, what's the weather?"*

Use a Skill

- "Alexa, open GO PIANO."*

Play Internal Songs

- "Alexa, ask GO PIANO to play Beethoven."*
- "Alexa, ask GO PIANO mute right-hand."*
- "Alexa, ask GO PIANO to stop."*
- "Alexa, ask GO PIANO to play Chopin"*
- "Alexa, ask GO PIANO to play Turkish march."*

Select Tones (Sounds)

- "Alexa, ask GO PIANO to select Organ."*
- "Alexa, ask GO PIANO to change the tone to Strings."*
- "Alexa, ask GO PIANO to select the sound, Drums."*

Sound the Metronome

- "Alexa, ask GO PIANO to start metronome."*
- "Alexa, ask GO PIANO to set tempo to 80."*
- "Alexa, ask GO PIANO to change time signature three four."*
- "Alexa, ask GO PIANO, slower."*
- "Alexa, ask GO PIANO to set tempo to Largo."*

Record Your Performance

- "Alexa, ask GO PIANO to record."*
- "Alexa, ask GO PIANO to stop."*
- "Alexa, ask GO PIANO to play it back."*

Play a Game

- "Alexa, ask GO PIANO to play a game."*

Make various settings.

- "Alexa, ask GO PIANO octave down."*
- "Alexa, ask GO PIANO transpose E flat."*
- "Alexa, ask GO PIANO to set master tuning to 442 Hz."*
- "Alexa, ask GO PIANO to set master tuning lower."*

* This document explains the specifications of the product at the time that the document was issued.