www.americanmusical.com

Numark

PARTY ROCKER

User Guide
English (3 – 4)

Guía del usuario
Español (5 – 6)

Guide d'utilisation
Français (7 – 8)

Guida per l'uso
Italiano (9 – 10)

Benutzerhandbuch
Deutsch (11 – 12)

User Guide (English)

Support

For product registration, latest product information, and additional product support visit **numark.com**

WARNING: DO NOT splash or immerse in water or other liquids. Not for use in rain. Use only in dry locations.

WARNING: DO NOT look directly into the dome light. Do not sit, stand, or apply pressure on the dome light.

BOX CONTENTS

- PARTY ROCKER
- Microphone with mic cable
- Audio Cable with 1/8" (3.5mm) connectors
- Power Cable (standard IEC)
- User Guide
- Safety Instructions & Warranty Information Booklet

Quick Setup / Connection Diagram

1. Make sure all items listed in Box Contents at the beginning of this guide are included in the box.
2. READ SAFETY INSTRUCTION BOOKLET BEFORE USING THE PRODUCT.
3. For optimal performance, place House Party in the center of the room so it is unobstructed by walls, furniture, etc.
4. Move Light Mode switch to OFF
5. Turn down the Master Volume on the Party Rocker.
6. Turn on Party Rocker.
7. Connect your music player with an audio cable or Bluetooth (see *Connecting with a Bluetooth Device* for more details on this)
8. Adjust the volume on your music player and on Party Rocker as needed.
9. Adjust the Light Mode switch on Party Rocker as needed.
10. Turn off Party Rocker when not in use.

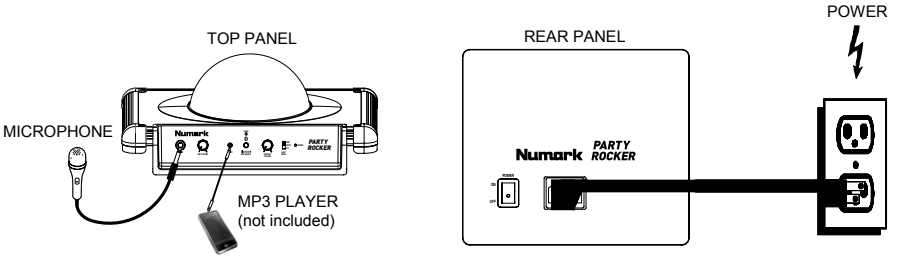

Diagram and Parts Description

1. **Microphone Input with Volume Control (1/4"):** This mono input accepts a 1/4" input such as a microphone, guitar, or other musical instrument.
2. **Auxiliary input:** This stereo 1/8" input can be used to connect a smartphone, MP3 player, or other audio source.
3. **Bluetooth®:** The **Paired** LED will be lit when a device is paired to PARTY ROCKER. This LED will not be lit when PARTY ROCKER is first powered on (unless it was previously paired with a device). Press the **Disconnect** button to disconnect a paired Bluetooth device.

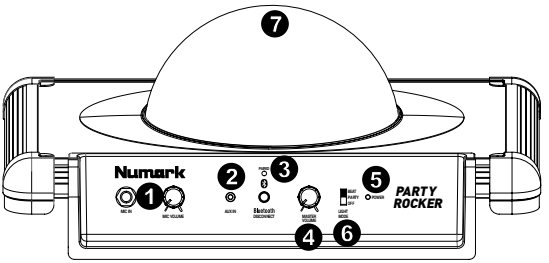

***WARNING:** Do not look directly into the dome light. Do not sit, stand, or apply pressure on the dome light.*

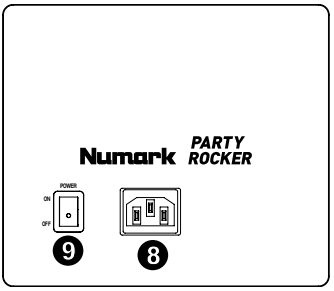

4. **Master Volume Control:** This adjusts the speaker's main mix volume, which includes Microphone Input, Auxiliary Input, and the audio of a paired Bluetooth device.
5. **Power LED:** Indicates whether PARTY ROCKER is on or off.
6. **Light Mode:** There are three modes to select from for how the strobe lights react to the music.
   - Beat = the light reacts to the beat of the music.
   - Party = dome light spins and changes color whether there is music playing or not.
   - Off = the lights in the dome can spin and react to the music playing (depending on the Light Mode that is selected).
7. **Dome:** The dome light can spin and react to the music playing (depending on the Light Mode that is selected).
8. **Power Cable Input (IEC):** Insert the included power cable here to power the unit.
9. **Power ON/OFF Switch:** Turns PARTY ROCKER on or off.

Troubleshooting

If the sound is distorted: Try lowering the volume control of your sound source or musical instrument. Also, try to reduce the overall volume of PARTY ROCKER.

If there is too much bass: Try adjusting the tone or EQ control on your sound source to lower the bass level. This will allow you to play the music louder before clipping (distortion) occurs.

If there is a high-pitched whistling noise when using microphones: This is probably feedback. Point the microphone away from the speaker.

If you can't hear the microphone over the music volume: Turn down the music volume from your source.

Connecting with a Bluetooth Device

1. Turn on your Bluetooth device.
2. Power on PARTY ROCKER and it will automatically go into pairing mode to search for Bluetooth devices. You will know you are in pairing mode when the LED is off.
3. If your Bluetooth device is not able to pair to the amp, press the disconnect button on the amp to break previous Bluetooth connections and reset the Bluetooth module.
4. Navigate to your Bluetooth device's setup screen, find "Party Rocker" and connect.
   Note: If your Bluetooth device prompts for a pairing code, enter '0000'.
5. **Paired** LED will light up solid when it is 'paired'.
   Note: If you experience trouble pairing or playing music, update your device's OS.
6. To disconnect pairing, press the 'Disconnect' button on PARTY ROCKER.
7. To connect to another Bluetooth device, repeat steps 3-4.

Note: Maximum range will be achieved when using devices with Bluetooth 4.0.

Specifications

Dimensions: (L X W X H): 10” x 15” x 20.4"; 254 mm x 381 mm x 517 mm

Weight: 19.40 lbs.; 8.7 kg

Input Voltage: North America: 100-120VAC, 50/60 Hz; EU: 220-240VAC, 50/60 Hz

Output Power: 50W Peak

Frequency Response: (-3dB): 59 Hz – 25.5 kHz (Aux)

Microphone type: Dynamic microphone

Supported Bluetooth Profile: A2DP

Bluetooth Range: Up to 100 feet*

Specifications are subject to change without notice.

**Bluetooth range is affected by walls, obstructions, and movement. Best performance is achieved in a wide open area.*

Trademarks and Licenses

The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Numark is under license.

All other product or company names are trademarks or registered trademarks of their respective owners.

For the electrostatic discharge (ESD) test of EN301 489-1/17, it was found that manual operation is needed to resume normal operation as intended after the test.

www.americanmusical.com

numark.com

Manual Version 1.1